

Electric Storage Radiators - Installation Instructions

Ecowarmth Radiators should be installed to comply with recommended clearances as described below.

1. Fix the U-Profiles to the wall using suitable fixings and using the spacing distances shown opposite.
2. Hang the lower fixing hooks (1) into the U-Profiles.
3. Hang the radiator onto the hooks and tilt it forward (2). Ensure tips of hooks are inserted into ribs!
4. Insert the upper hooks into the U-Profiles and push them up.
5. Bring the radiator (2) into an upright position
6. Push the upper hooks (3) down firmly ensuring that tips are inserted into ribs to allow for expansion and contraction of radiator casing
7. Connect the wires from the side panel to the radiator connection block.
8. Affix the side panel to the radiator by hooking the lower lugs into the ribbed part of the radiator and the top part so that the adjustable screw fits into the slot provided.
9. Tighten up the top screw and fit the top part of the radiator
10. Turn the control knob slowly until the LED light comes on red.
11. Let the radiator warm up fully (approx 10 - 15 mins.) and then turn the control knob back to the setting required.
Each number on the control knob = approx. 5° C

Notes

1. Ensure that the radiators can radiate the heat into the room and are not blocked by furniture
2. If walls are unsound (plasterboard, cob etc), then rest the U-Profile onto the skirting board as support or use the Ecowarmth supporting legs (10 cm high). Ensure the spokes are inserted up into the ribs

